



ZTE Majesty Speaker Replacement

How to replace Replacing Speaker

Written By: Gustavo Hernandez





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery



- Place your phone in the palm of your hand.
- You will notice the groove and that the back detaches from the phone.

Step 2



- Using either your finger or a small prying object, pry the back off to reveal the battery.
- Place the back to the side. You're going to need it again.

Step 3



- Now that the back is open, with your finger pry the battery out of the groove in the phone.

Step 4 — Speaker



- Remove the back of the phone by removing the 9 PH000 shown

Step 5



- Pry the speaker as shown to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-19 02:01:34 PM.